


1

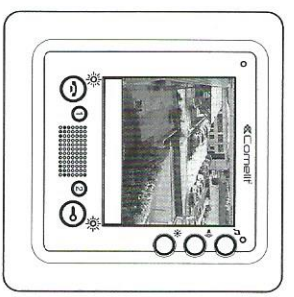

2

**WARNINGS**  
 Cornellif Group SpA, does not assume responsibility for improper use of the apparatus, for modifications made by third parties for any reason or purpose, or for the use of non-original accessories and materials.  
**Caution!** In order to reduce the risk of faults and electric shocks:  
 • Do not open the apparatus or carry out any repairs yourself. If necessary, request the services of qualified personnel.  
 • Do not insert objects or pour liquids into the device.  
 • Clean using a damp cloth. Do not use alcohol or other aggressive products.

**Monitor description Fig. 1**

- 1 Privacy service active/system busy indicator LED
- 2 Lock-release activation indicator LED
- 3 Audio active indicator LED

**Settings:**

- ▶ Ringtone volume adjustment/Privacy service activation knob
- ▶ To increase the ringtone volume, turn clockwise
- ▶ To activate the Privacy function, turn fully anticlockwise
- » The Privacy active LED will come on
- ▶ Audio volume adjustment knob
- ▶ To increase the value, turn clockwise
- ▶ Brightness control knob
- ▶ To increase the value, turn clockwise

**Description of buttons:**

- ① Key 1 switchboard call (programmable)<sup>1</sup>
  - ② Key 2 self-ignition (programmable)<sup>1</sup>
- ↔ Key button
- ↔ Audio key

**NOTE:** If, after a key is pressed, LED 1 lights up for 4 seconds, this means the function is not available or the system is busy.

**Using basic Smart monitor functions**

- ▶ LEDs 2 and 3 flash in response to a call Fig. 2.
  - ▶ To activate/deactivate the audio, press . Wait for LED 3 to be lit steadily before speaking.
  - ▶ To activate the electronic door lock, press .
    - » LED 2 lights up for 4 seconds.
    - » one confirmation tone is emitted.
  - ▶ Press ① to activate the Switchboard call or Intercom call function.<sup>1</sup>
    - » A call is transmitted to the corresponding switchboard (if present) or an intercom.
  - ▶ Press ② to activate the Self-ignition function.
    - » The image from the corresponding external unit appears on the monitor.
    - By pressing ② repeatedly, you can switch between the external units (max. 2 if present).
- <sup>1</sup> For further information contact your usual installer.